



Duo-Safety Ladder Corporation

513 W 9th Ave - PO Box 497 Oshkosh WI 54903-0497
Toll Free# 877-386-5377 Ph# 920-231-2740 Fax# 920-231-2460
www.duosafety.com mail@duosafety.com

Effective June 1994

Directions for Applying Replacement Labels on Ladders

Heat Sensor Label (part# HSL-1):

4 heat "dots" & 1 instruction label per ladder section:



Instruction Label (1 per every 4 heat "dots")



Heat Dot

Place 2 "dot" heat sensor labels below the 2nd rung down from the top of each inside rail section (1 on the right inside rail - 1 on the left inside rail).

Place 2 "dot" heat sensor labels, including 1 instruction label at the approximate middle point of each inside section (1 on right inside rail - 1 on left inside rail with instruction label).

Fire Ladder Label (part#FLL-1) - Danger/Electrical/Angle:

The Fire Ladder Label set is placed on the outside of the rails of the base section, between the 4th and 5th rung up from the bottom of the ladder.

On the provided label sheet (see photo sample), be sure the left label on the sheet is placed on the right side rail, and the right label on the sheet is placed on the left side rail. If placed on the wrong sides of ladder, they will not make sense for proper ladder placement.

1 pair per ladder:



Place on right side of rail

Place on left side of rail

